


Cap and base flashing
(good method)

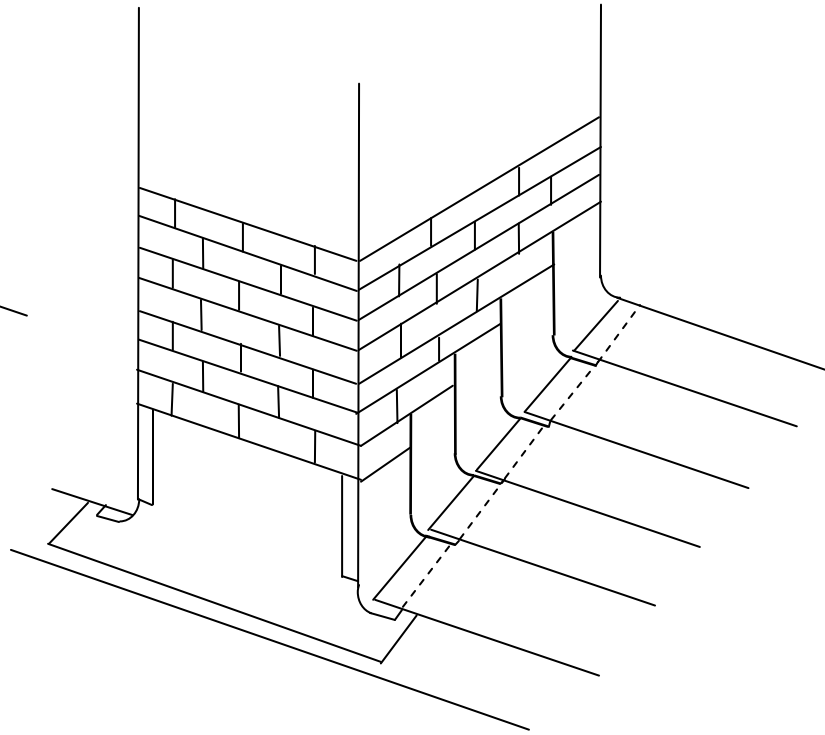

Flashing tucked under shingles
(poorer method)